

snookums

0+
MONTHS

ELECTRIC STEAM STERILISER

Quick Answers for Busy Parents



WATCH HOW IT WORKS
in 30 seconds

SCAN TO SEE IT IN ACTION

EU
SAFETY
TESTED

BPA
FREE ✓

Read this important information carefully before you use the appliance and save it for future reference.

DANGER

- This steriliser is designed for use with a mains supply of 220–240V AC, 50/60Hz.
- Do not allow children to play with the appliance.
- Never immerse the base, the power cord or the mains plug in water or any other liquid.
- Failure to follow the descaling instructions may cause irreparable damage to the steriliser.
- Never disassemble the base to avoid the risk of electric shock.

WARNING


- This appliance can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning the safe use of the steriliser and understand the hazards involved.
- This appliance shall not be used by children. Keep the appliance and its cord out of reach of children.
- There are no serviceable parts inside the appliance. Do not attempt to open, service or repair the appliance yourself - RISK OF ELECTRIC SHOCK. In the event of product failure, please return it to the store of purchase along with your receipt.
- Never touch, open or move the steriliser when in use or shortly after the sterilising cycle has finished as it contains boiling water and steam
- Allow to cool for at least 3 minutes before handling. Only hold the lid by its grips.
- Beware of hot steam that comes out of the vents in the lid during use and when you open the lid following a cycle-HOT STEAM CAN CAUSE BURNS. Do not obstruct the steam vents during use.
- Keep the steriliser well away from other objects when in use. Do not place items on top of the steriliser when in use.
- Always disconnect from the mains power socket when not in use. To stop the steriliser mid-cycle, turn off at the mains socket and disconnect the power cable.

- Never use the steriliser without water. Only use water without any additives. Do not put bleach or other chemicals in the appliance.
- Only sterilise baby bottles and other items that are suitable for this appliance. Check the user manual of the items you want to sterilise, to make sure they are suitable for this appliance.
- Do not use the appliance if the plug, mains cable or appliance itself is damaged.
- This appliance is intended for household use only.

CAUTION

- Do not expose the appliance to extreme heat, hot surfaces or direct sunlight.
- Never allow items to come into contact with the steriliser heating plate during use. For this reason, do not attempt to sterilise small items that could fall through the holes onto the heating plate.
- Always place and use the appliance on a dry, stable, level and horizontal surface.
- Regular care and cleaning is essential to maintain the steriliser in peak working condition.
- Do not let the mains cord hang over the edge of the table or worktop on which the appliance stands.
- Always pour any remaining water out of the appliance after use and when the appliance has cooled down.
- Switch off the appliance and disconnect from supply before changing accessories or approaching parts that move in use.

PARTS

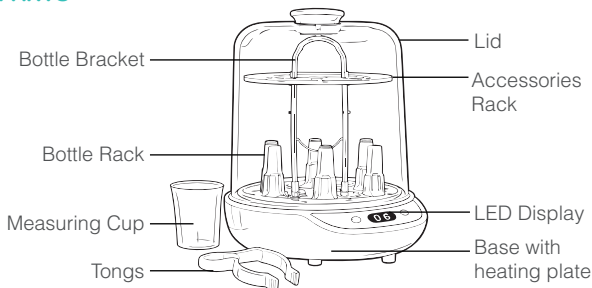

BEFORE FIRST USE

Run a cycle with an empty rack to ensure that the steriliser is clean, functioning correctly and is ready to use before sterilising your feeding bottles and accessories for the first time.

OPERATING YOUR STERILISER


Preparing for sterilising

Before you put the items to be sterilised in the steriliser, clean them thoroughly in the dishwasher or clean them by hand with hot water and liquid dishwashing detergent.


Assembling the steriliser



1. Pour 90ml of distilled / tap water into the base using the measuring cup provided.

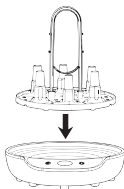

2. Assemble the bottle bracket into bottle rack and then lay it on the steriliser base.

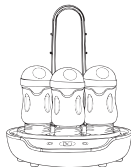

3. Place the extra wide bottle caps on each bottle base, open side down.



4. Attach the accessories rack. Load screw rings, spreading them evenly around the available area.



5. Ensure all items are positioned in a manner that allows the steam to circulate freely around them. Place the steriliser body onto the base and ensure it is correctly aligned.

Sterilising

- 1.Ensure your hands are dry before plugging the mains cord into the power supply.
- 2.Press the power button. The LCD display will show '88' and flash five times to indicate that the steriliser is starting.
- 3.The default sterilising time is 6 minutes. Press  to start the cycle. The display shows a countdown of the sterilising cycle. It counts down the minutes (6–1) and seconds during the final minute.
- 4.After the 6-minute sterilisation cycle is complete, the steriliser automatically begins a 3-minute cooling period. The display counts down from 3 to 1 minute while the unit cools.
- 5.When it reaches 0, the steriliser will beep 3 times and switch off automatically.
- 6.Press the on/off button  for two seconds, to switch off the steriliser.

Note: The steriliser will switch off automatically if left idle for 5 minutes without operation

CLEANING

Never immerse the base and the power cord in water or any other liquid.

Note: The steriliser is not dishwasher-proof.

- Always unplug the appliance and let it cool down before you clean it.
- Remove the lid and bottle rack from the steriliser base.
- Pour out any remaining water from the steriliser base and wipe dry.
- The lid, bottle racks, bottle bracket, measuring cup and tongs can be cleaned with hot water and liquid dishwashing detergent.

DESCALING

Limescale is a mineral residue left behind when water is heated. It may appear as white powder or brown stains. Over time, limescale can slow heating and reduce the steriliser's performance and damage its components if allowed to build up. In areas with hard water, it builds up faster. Regular descaling helps keep your steriliser working properly.

Descalc the steriliser at least every 2 weeks to ensure it works efficiently.

- Cover the heating plate in the steriliser base with a mixture of 50 ml of white vinegar and 100 ml of warm water. Do not use other types of descaler.
- Leave to soak at least 1 hour or until the limescale has dissolved.
- Empty the base and rinse thoroughly.
- Wipe the base with a damp cloth

TROUBLESHOOTING

Problem	Solution
There are small spots ranging from snow white to brownish appearing on the heating plate	This is a sign that your steriliser should be descaled. In any case, the steriliser should be descaled at least every 2 weeks to ensure that it continues to work effectively.
Unit will not switch on	Ensure the unit is properly plugged into the mains power supply. Check that the wall socket is switched on. Inspect the fuse in the plug and confirm it has not blown. You can also test the socket by plugging in another appliance.
Excessive steam escaping from the lid	Make sure the lid is correctly fitted, fully closed, and forming a proper seal. Rearrange the items inside the steriliser if they are preventing the lid from closing properly.
Brown stains appearing inside the unit	Ensure all items are thoroughly cleaned and rinsed before placing them in the steriliser.
Heater plate has become discoloured	The heater plate may naturally become discoloured with regular use. This is normal and will not affect the performance of the unit.
Appliance does not restart immediately after use	Allow the unit to cool for approximately 10 minutes. This allows the thermostat to reset before the appliance can be used again.

If after carrying out all checks, the steriliser is found to be faulty and is within the guarantee period, it should be returned to the store along with your proof of purchase.

SUPPORT

For all product support such as frequently asked questions, please visit snookums.co.za.

Note: This appliance needs to be descaled regularly for optimal performance. If you do not do this, the appliance may eventually stop working. In this case, repair is NOT covered by your warranty.

WARRANTY

- Snookums offers customers a 12-month warranty on the steriliser base from date of purchase.
- Proof of purchase is required by way of a valid slip.
- This warranty becomes void if product was used commercially or was subjected to misuse, abuse or alteration.
- No exchanges or refunds will be done. Only the faulty parts or components will be replaced.



WATCH HOW IT WORKS
in 30 seconds
SCAN TO SEE IT IN ACTION

SNOOKUMS BABY PRODUCTS

Postnet 265, Private Bag X13
Brackenfell, 7561
South Africa

www.snookums.co.za
info@snookums.co.za
Customer Care: 086 101 8885



This symbol means that electrical products shall not be disposed of with normal household waste. Follow your country's rules for the separate collection of electrical products.